

# *AlantéDX*

# *AlantéLT*



**Owner's Manual**  
**Front Wheel Drive Power Chairs**  
**Models GP204/GP215**



---

Thank you for purchasing your Alante DX/LT™ power chair. We are honored you have chosen Golden Technologies for your mobility needs.

Alante DX/LT™ Models GP204/GP215

Standard Packing List:  
 1 Owner's Manual  
 Base with Battery Pack  
 1 Seat  
 2 Seat Arms  
 1 Seat Belt  
 1 Battery Charger  
 Seat Post Nut and Bolt

**FOR YOUR RECORDS**

Please fill in your Alante DX/LT™ information below. This information will be useful in the event that you ever need to contact Golden Technologies, Inc. concerning your power chair.

**Your Alante DX/LT™**

Model \_\_\_\_\_ Serial Number \_\_\_\_\_  
 Date of Purchase \_\_\_\_\_ Body Color \_\_\_\_\_  
 Options \_\_\_\_\_

**Your Golden representative or dealer**

Name \_\_\_\_\_  
 Company \_\_\_\_\_  
 Address \_\_\_\_\_

**Please remember to fill in and return your warranty registration card.**

**Tools Required:**

The following tools will allow you to make all comfort adjustments to your power chair.

2 – 13mm wrenches	10mm wrench	4mm Allen wrench
17mm wrench	8mm Allen wrench	
12mm wrench	5mm Allen wrench	

DISCLAIMER

We ask that you read this manual completely before operating your new Alante DX/LT. Golden Technologies, Inc. is not and cannot be held responsible for any damage or injury incurred due to improper or unsafe use of the Golden Alante DX/LT, power chair. Golden Technologies, Inc. specifically disclaims responsibility for any bodily injury or property damage that may occur during any use that does not comply with applicable federal, state, or local laws or ordinances.

# CONTENTS

---

---

I. Introduction.....	4-5
II. Safety.....	6-9
III. EMI/RFI.....	10
IV. Assembly of your GP204/GP215.....	11-16
V. Disassembly of your GP204/GP215.....	17
VI. Comfort Settings.....	18-23
VII. Operation/Diagnostics/Troubleshooting.....	24-31
VIII. Battery Charging.....	32-33
IX. Care and Maintenance of your GP204/GP215.....	34
X. Riding Your Alante DX/LT™.....	35-36
XI. Technical Specifications GP204/GP215.....	37-38
XII. Warranty.....	39-40
Warranty/Registration Card.....	41

# I. INTRODUCTION

---

Congratulations on the purchase of your new Alante DX/LT™ power chair. The Alante DX/LT, combines cutting edge technology with attractive designs that are also highly functional in today's world. We at Golden Technologies, Inc. know that you have chosen a power chair that will give you years of dependable operation and also will enhance the quality of your life by providing you with the mobility to experience an active daily lifestyle.

Even though your new Alante DX/LT is both user-friendly and designed for maximum maneuverability in even the tightest spaces, we ask that you please read, understand and follow all of the instructions and suggestions in this manual before you operate your Alante DX/LT for the first time. The safe use of your new power chair is very important to us.

If you feel that you do not understand the instructions and suggestions presented in this owner's manual, or if, for any reason, you do not feel capable of performing the activities necessary to assemble, disassemble, operate, or maintain your Alante DX/LT, please contact your local Golden Technologies, Inc. dealer or call Golden Technologies, Inc. Technical Support Services at (800) 624-6374.

Golden Technologies, Inc. cannot be held responsible for personal injury or property damage resulting from the unsafe or the improper use of any of our broad range of health and personal mobility products. Also, Golden Technologies, Inc. cannot be held responsible for personal injury or property damage resulting from attempts to follow instructions, suggestions, and guidelines presented in this owner's manual.

Our Research and Development Department, our Quality Control Department, and our Engineering Department have used the latest product specifications and the latest product design information to manufacture your Alante DX/LT. Golden Technologies, Inc. reserves the right to implement changes into our product lines when those changes become desirable or necessary. If changes are implemented into our product line, there may be minor differences between the product you purchased and the illustrations and instructions in this owner's manual.

Please fill out and mail the enclosed warranty registration card. Registration is also available @ [www.goldentech.com](http://www.goldentech.com). We at Golden Technologies, Inc. would appreciate hearing about the dependability of your Alante DX/LT and about the convenience of mobility it has provided for you. We would also appreciate hearing about the service you received from your local Golden Technologies, Inc. dealer or representative.

Golden Technologies, Inc.  
401 Bridge Street  
Old Forge, PA 18518

Phone: (570) 451-7477  
Fax: (570) 451-7494  
Toll free: (800) 624-6374

For more information about our products and services or to send us your comments, please visit our website at [www.goldentech.com](http://www.goldentech.com)

# I. INTRODUCTION

## ACCESSORIES FOR THE Alante DX/LT™ POWER CHAIR:

A variety of accessories are available for your Golden Alante DX/LT Power chair. Please contact your Authorized Golden Technologies Dealer for more information or to order.

- Cane Holder Tube
- Cup Holder
- Deluxe Pack N' Go
- Forearm Crutch Holder
- Safety Flag
- Power chair Cover
- Touch-up Paint
- Swing-Away Joystick Bracket (Optional)

\*Some accessories require a mounting bracket or mounting clips. Please check with your dealer to find out if the accessory you would like to order requires a mounting bracket or mounting clips.

### Safety Guidelines

The symbols below are used in the owner's manual and/or on the product to identify warnings and to notify you of important safety information. Make sure you read and understand them completely.



**WARNING!** Indicate(s) a hazardous situation which, if not avoided, could result in death or serious injury. This icon is represented as a black symbol on a yellow triangle with a black border.



**MANDATORY!** Failure to perform mandatory actions can cause personal injury and/or equipment damage. This icon is represented as a white symbol on a blue dot with a white border.



**PROHIBITED!** Indicate(s) an action(s) that should not be performed under any circumstance. Failure to adhere can cause personal injury and/or equipment damage. This icon is represented as a black symbol with a red circle and red slash.

### Safety Symbols

The symbols below identify warnings, mandatory actions, and prohibited actions. They can be found in the owner's manual and/or on the product. Make sure you understand all safety labels before operating the product. Do not remove safety labels from the product.



Read and follow the owner's manual!



Explosive conditions exist!



Indoor use only!



Use only AGM or Gel-Cell batteries!



Avoid transmitters!



Hot surface!



Pinch/Crush Hazard!



Do not place into trash!



Electrical hazard!



Corrosive chemicals inside battery!



Recycle



Do not use personal electronic devices!

## II. SAFETY

---

Your Golden *Alante DX/LT™* is a battery-operated personal mobility vehicle. Please exercise caution and consideration when you are operating it. Driving your *Alante DX/LT* carefully and thoughtfully will help ensure your personal safety and the safety of other people.



**MANDATORY! Read and follow the owner's manual before operating your power chair.**

**Note:** Before learning to operate your Alante DX/LT, have your Golden Technologies, Inc. representative determine if it is advisable for you to practice getting on and off your power chair and operating it in the presence of an attendant.

### **BEFORE getting on your Alante DX/LT**

- Check to be certain that the power is turned OFF. See “Operation” section on pages 24-31. This will eliminate the possibility of accidentally activating the joystick and causing injury to you or to others.
- Check to be certain that your Alante DX/LT is not in the freewheel mode. See the “Operation” section of pages 24-31.
- Flip up the armrests.
- If your chair is equipped with swing away leg rests, move them to the sides.
- If your chair is equipped with a footrest, flip it to the “up” position.

### **Getting ON your Alante DX/LT**

- Carefully seat yourself comfortably and securely on the seat.
- Adjust the leg rests or flip down the footrest.
- Flip down the armrests.
- Fasten the seat belt.

### **Getting OFF your Alante DX/LT**

- Make certain that the power is turned off.
- Unfasten the seat belt.
- Flip up the armrests.
- Flip up the footrest, or move the leg rests to the sides.
- Carefully stand and step away from the chair.

### **MAXIMUM WEIGHT**

Your Alante DX/LT has been rated to a maximum payload (passenger and anything else being carried on the power chair) of 300 pounds. Exceeding the maximum weight rating will void your warranty.



**WARNING Exceeding the maximum weight capacity will void your warranty and may result in injury to yourself and/or others.**

## II. SAFETY

---

### DRIVING ON AN INCLINE

- Drive with caution when attempting to negotiate any incline, even handicap access ramps.
- Try to keep your Alante DX/LT moving when climbing an incline. If you do come to a stop, restart and accelerate slowly and carefully.



#### WARNING

- **Always** climb or descend a gradient by driving straight up or straight down the face of the slope.
- **Do not** traverse or drive across the face of a gradient.
- **Do not** attempt to negotiate an incline that is covered with snow, ice, cut or wet grass, leaves, or any other potentially hazardous material.
- **Do not** back down an incline.
- **Do not** try to descend or climb a slope whose gradient is greater than recommended. See “Specifications” section.



#### WARNING

**IF, WHILE YOU ARE DRIVING DOWN A SLOPE, YOUR POWER CHAIR STARTS TO MOVE FASTER THAN YOU FEEL IS SAFE, RELEASE THE JOYSTICK LEVER AND ALLOW YOUR ALANTE DX/LT TO COME TO A STOP. WHEN YOU FEEL THAT YOU AGAIN HAVE CONTROL OF YOUR POWER CHAIR, PUSH THE JOYSTICK LEVER FORWARD AND CONTINUE SAFELY DOWN THE REMAINDER OF THE SLOPE.**

### MEDICATION

Always check with your physician to determine if any of the medications you are taking may affect your judgment and/or your ability to operate your *Alante DX/LT*<sup>™</sup>. Also check with your physician concerning your physical ability to operate a power chair.

## II. SAFETY

---

### SAFETY RULES



#### WARNING

- **Do not** attempt to use your *Alante DX/LT* on an escalator. Always use an elevator.
- **Do not** carry passengers on your power chair.
- **Do not** operate your *Alante DX/LT*, if it is not functioning properly.
- Use **caution** when driving on soft or uneven surfaces such as grass, gravel and on decks where there is no railing.
- **Never** drive on the roadway, except when you must cross the street.
- **Always** cross streets at intersections and use the most direct route, making sure that your path is clear and that you are visible to motor traffic.
- It is **not recommended** to drive your *Alante DX/LT*, up or down a step or curb that is higher than 1-1/2 inches.
- **Never** back up or down a step or curb.
- **Never** operate your *Alante DX/LT*, while you are under the influence of alcohol.
- **Do not** operate or store your power chair where it will be exposed to rain, snow, mist and below-freezing temperatures.
- **Do not** operate your power chair on slippery, icy or salted surfaces.
- **Never** sit on your power chair when it is in freewheel mode and on an incline or decline.
- **Never** place your power chair into freewheel mode without a trained assistant present.
- **Do not** modify your power chair in any way that is not authorized by Golden Technologies, Inc.
- **Do not** disassemble the tire. If disassembly is required, have your authorized Golden Technologies dealer perform any necessary maintenance or repair.
- **Do not** attempt to inflate the tires of your *Alante DX/LT*. Your power chair is equipped with foam-filled flat free tires that do not require inflation.
- **Never** sit on your *Alanté DX/LT* when it is being transported.
- **Always** fasten down your *Alanté DX/LT* securely with an approved tie-down system while transporting your power chair.

## II. SAFETY

---

Please be sure to follow this important warning when transferring onto or off the Golden Alante DX/LT power wheelchair:



**WARNING NEVER TRANSFER ON OR OFF OF THIS POWER WHEELCHAIR USING THE SEAT BACKREST FOR SUPPORT DURING TRANSFER. THE SEAT BACK MAY FOLD DOWN AND MAY CAUSE YOU TO LOSE YOUR BALANCE AND COULD RESULT IN PERSONAL INJURY.**



**WARNING DO NOT CONNECT OR ALLOW ANYONE EXCEPT AN AUTHORIZED GOLDEN TECHNOLOGIES REPRESENTATIVE TO CONNECT ANY ELECTRICAL OR MECHANICAL DEVICE TO YOUR ALANTE DX/LT. UNAUTHORIZED ACCESSORIES WILL VOID THE WARRANTY AND MAY CAUSE INJURY.**

### III. EMI/RFI

---

The rapid development of electronics, especially in the area of communications, has saturated our environment with electromagnetic (radio) waves that are emitted by television transmitters, cellular phones, citizen's band radios (CBs) amateur radios (HAM radios), wireless computer links, microwave transmitters, paging transmitters, etc. These electromagnetic (EM) waves are invisible and increase in strength the closer one gets to the source of transmission. When these energy waves act upon electrical devices and cause them to malfunction or to function in an erratic or uncontrolled manner, they are referred to as Electromagnetic Interference (EMI) or Radio Frequency Interference (RFI).

#### EMI/RFI AND YOUR Alante DX/LT™

All electrically powered vehicles, including power chairs are susceptible to EMI/RFI. This interference could result in abnormal or unintended movement of your Golden *Alante DX/LT*.



**WARNING** Unintended movement or brake release could cause an accident or injury.

The FDA has determined that each make and model of power chair can resist EMI/RFI to a certain level. The higher the level of immunity, the greater the degree of protection from EMI/RFI measured in volts per meter (V/m). The FDA has also determined that current technology is capable of providing 20 V/m of immunity to EMI/RFI, which would provide useful protection against common sources of interference. This product has been tested and has passed an immunity level of 20 V/m.

#### EMI/RFI RECOMMENDATIONS



**PROHIBITED!** Do not turn on or use hand-held personal electronic communication devices such as cellular phones, walkie-talkies, or CB radios while your power chair is turned on.

- Be aware of any nearby transmitters (radio, television, microwave, etc.) on your intended route and avoid operation your of power chair close to any of those transmitters.
- Turn off the power if your *Alante DX/LT* is going to be in a stationary position for any length of time.
- Be aware that adding accessories or components or modifying your power chair may make it more susceptible to EMI/RFI.
- If unintended movement or brake release occurs, turn your power chair off as soon as it is safe to do so.
- Report all incidents of unintended movement or brake failure to your Golden Technologies representative or to Golden Technologies.



**WARNING** **TURN OFF YOUR POWER CHAIR AS SOON AS IT IS SAFELY POSSIBLE IF UNINTENDED OR UNCONTROLLABLE MOTION OCCURS OR IF UNINTENDED BRAKE RELEASE OCCURS.**

## IV. ASSEMBLY

---

Your *Alante DX/LT* is shipped partially disassembled in order to maximize the protection of all its parts during the shipping process. Please follow the instructions below to quickly and easily assemble the power chair for your use.

**NOTICE** You will need only basic tools. If you do not have the required tools, or if you do not feel capable of safely assembling your power chair, please contact your local Golden Technologies, Inc. representative.

### Main Components

1. Base
2. Battery Pack
3. Seat Assembly
4. Seat Belt
5. Joystick
6. Foot Plate




**Figure 1**

## IV. ASSEMBLY

Before operating or assembling your *Alante DX/LT*, be sure to remove the battery contact insulator under the battery box. Your *Alante DX/LT* will not power up or operate with the insulator in place.

1. Grasp the battery box handle and lift the battery pack from the unit.

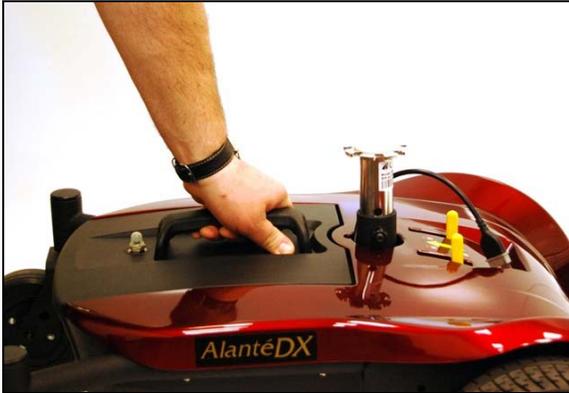

**Figure 2**



**Figure 3**

2. Remove the rectangular black fabric insulator from the unit.
3. Replace the battery pack. Be sure it is securely in place.



**WARNING** The *Alante DX* battery pack weighs 30 pounds, and the *Alante LT* battery pack weighs 27 pounds. The standard (18 x 16) seat assembly for either unit weighs 36 pounds. Please ask for help if you do not feel capable of safely lifting that much weight.

### Seat Installation

1. Fold the seat back down.



**Figure 4**

## IV. ASSEMBLY - cont.

---

2. Pull up on the seat rotation lever, and while holding the lever; lift the seat and align the seat pin with the hole in the seat post.



**Figure 5**

3. Insert the seat into the seat post and release the lever.



**Figure 6**

4. Move the seat from side to side until it drops into place facing forward.

**NOTICE** To rotate your seat, pull up on the seat rotation lever and rotate the seat to the desired position. Release the handle to lock the seat in position.



**WARNING** Be sure the seat is correctly installed and locked before operating your power chair.

## IV. ASSEMBLY

---

**!** **WARNING** The standard (18 x 16) seat assembly weighs 36 pounds. Please ask for help if you do not feel capable of safely lifting that much weight. Removal of arms will reduce the weight of the seat.

**!** **WARNING** Be sure the seat is correctly installed and locked before operating your power chair.

**!** **WARNING** Never pull on the arms or use them as a handle to move the power chair as they could inadvertently pull out of the receiver bar causing injury.

### Arm and Seat Belt Installation

1. Use a 4mm Allen wrench to remove the arm width adjustment screw from the arm receiver tube at the bottom rear of the seat frame. See figure 7.
2. Insert the arm into the arm receiver tube, so that the arm pad faces toward the front of the unit.



**Figure 7**

3. Adjust the width of the arm.
4. Insert the arm width adjustment screw (provided with the seat belt) through the anchor, and secure by tightening the adjustment screw. See figure 8.




**Figure 8**

5. Repeat steps 1 – 4 for the opposite side.

## IV. ASSEMBLY


### Joystick Installation

1. Insert the joystick mounting tube into one of the mounting tubes under the armrest pads.

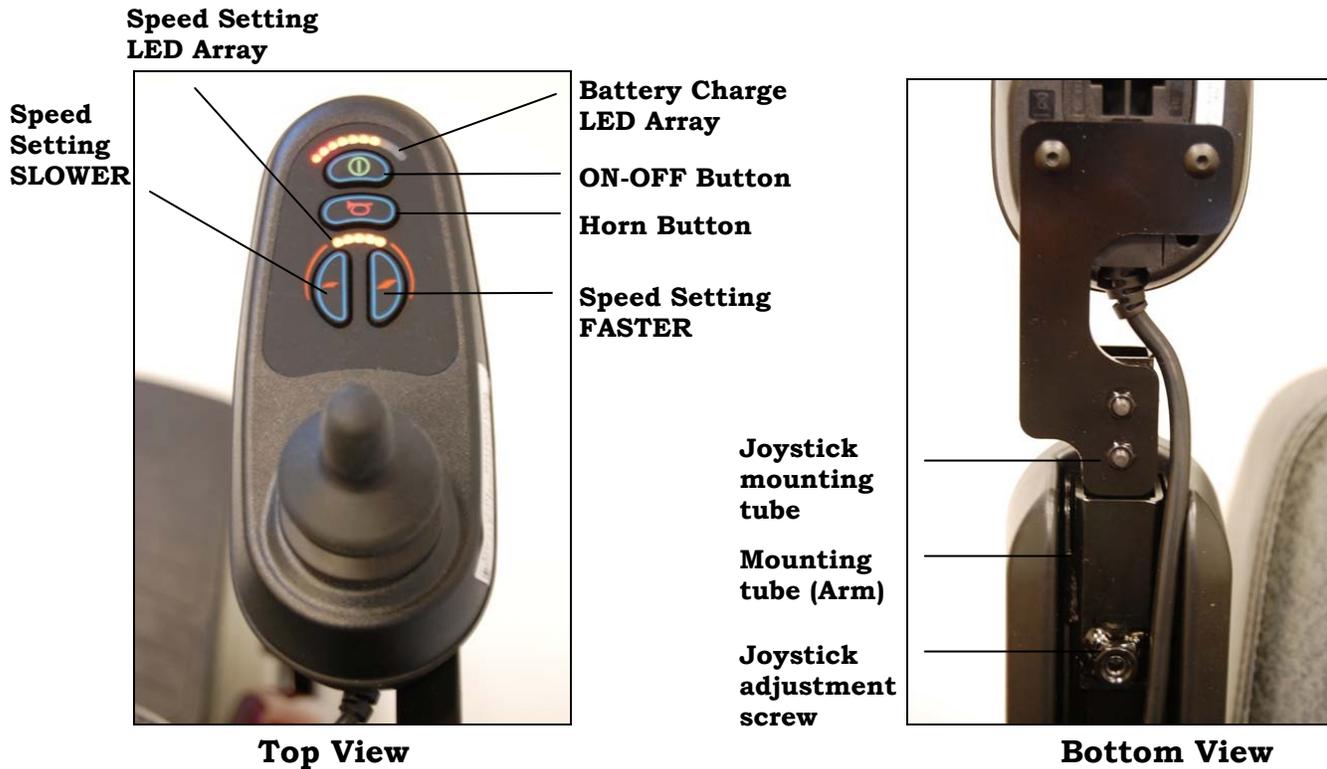

**Figure 9**

2. Adjust the position of the joystick to a comfortable spot.
3. Tighten the joystick adjustment screw with a 4mm Allen wrench.

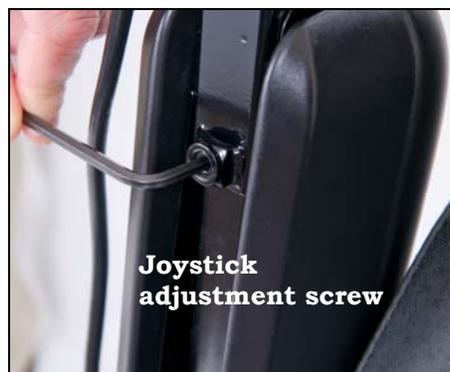

**Figure 10**

4. Secure the joystick cable to the arm with the cable retaining straps.

## IV. ASSEMBLY - cont.

---

5. Plug the joystick cable into the controller cable.



**Figure 11**

**Note:** The joystick may be installed on the left or right arm according to your preference.



**WARNING** Be sure the joystick cable and controller cables are securely attached to the unit and that the cables are not able to trail on the ground or become entangled on any surrounding objects while the unit is in use.

## V. DISASSEMBLY

---

To disassemble your *Alante DX/LT*™, simply reverse the assembly process. See pages 11-16.



**WARNING** Make certain that the controller power is turned off and that the chair is **NOT** in freewheel mode before attempting to perform disassembly.



**WARNING** The battery pack weighs 30 pounds on the Alante DX and 27 pounds on the Alante LT. Please get help if you do not feel capable of safely lifting that much weight.

### Battery Replacement

Should your battery need replacement; please contact your Golden Technologies representative. Battery replacement requires disassembly of the battery pack and must be performed by a qualified technician.



**MANDATORY!** Use only AGM or GEL-cell batteries.



**Battery Pack**

*Figure 12*

## VI. COMFORT SETTINGS

You may be spending a great deal of time on your *Alante DX/LT™*. To provide you with the maximum seating comfort, Golden Technologies, Inc. has designed this power chair to incorporate the following adjustments for operator comfort.

### COMFORT SETTINGS

- |                    |                  |                            |
|--------------------|------------------|----------------------------|
| 1. Seat height     | 4. Arm height    | 7. Footrest angle          |
| 2. Headrest height | 5. Arm width     | 8. Joystick bracket length |
| 3. Backrest angle  | 6. Armrest angle | 9. Joystick position       |




**WARNING** Make certain that the power to your *Alante DX/LT™* is turned off before making any adjustments, to eliminate the risk of the joystick being accidentally bumped and activating the power chair.

### Seat Height Adjustment

The seat is a center post design that is easily adjusted for height. To adjust the height to a comfortable level:

1. Remove the seat.
2. Place a 17mm wrench on the lock nut, and insert an 8mm Allen wrench into the bolt.
3. Loosen and remove the bolt, washers and lock nut, noting their placement.
3. Set the seat post to one of the three adjustment positions.

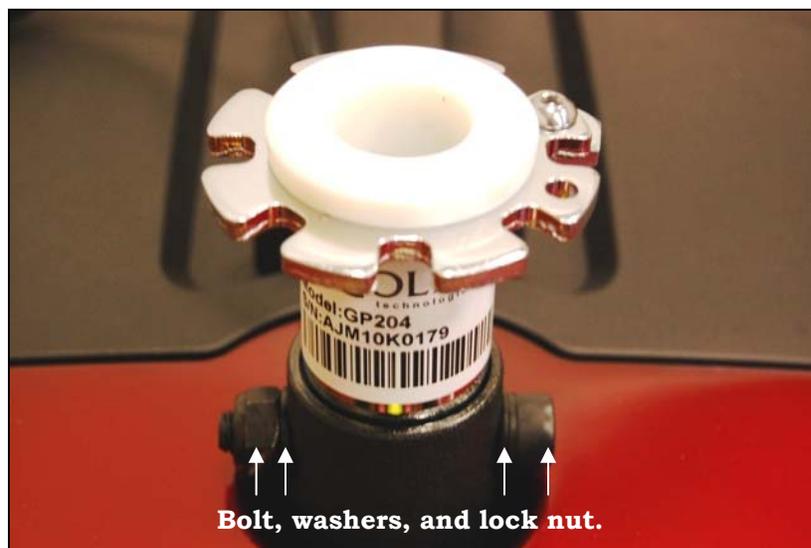

**Figure 13**

5. Replace the bolt, washers and lock nut in the same order you remove them and tighten securely.

## VI. COMFORT SETTINGS

---

### Headrest Height Adjustment


1. Standing behind the chair, push and then release the clamp on the left post of the headrest while you are pulling up or pushing down on the head rest. See figure 14.
2. The headrest will “click” to a stop in one of the preset positions.
3. Repeat step 1 until the headrest is at the desired height.



**Figure 14**

### Backrest Angle Adjustment (Refer to figure 15)

1. Place a 10 mm wrench on the lock nut and use a 5mm Allen wrench to loosen the bolt.
2. Remove the bolt and place it into the desired position. Note, that there are four angle positions available, 90 degrees to 120 degrees.
3. Replace the lock nut and tighten.

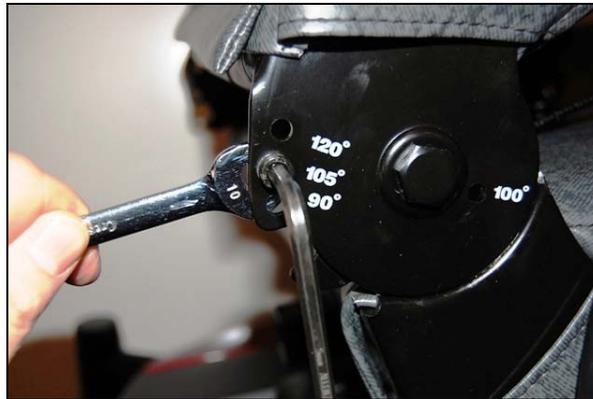

**Figure 15**


**Note:** The backrest can be folded down to minimize chair height during transport.

## VI. COMFORT SETTINGS

---


### Arm Height Adjustment

1. Loosen the arm height adjustment screws located on the back of the arm.

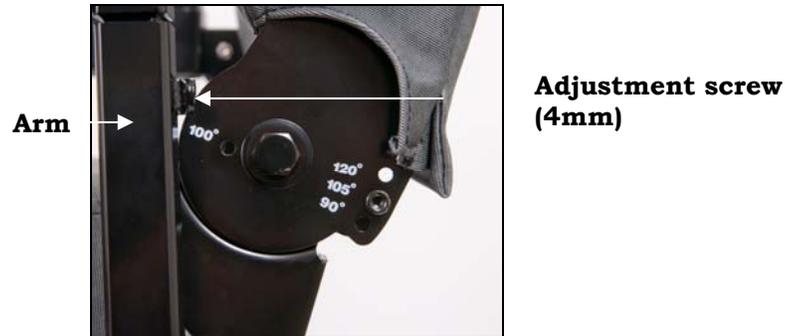

**Figure 16**


2. Lift the arm to the desired height making sure not to exceed the maximum height of the arm.
3. Tighten the arm height adjustment screw to secure the arm.
4. Repeat steps 1-3 to adjust the opposite arm.

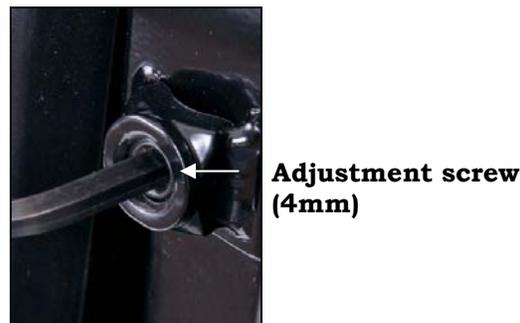

**Figure 17**

### Arm Width Adjustment

1. Use a 4mm Allen wrench to loosen the adjustment screw at the lower rear of the seat.

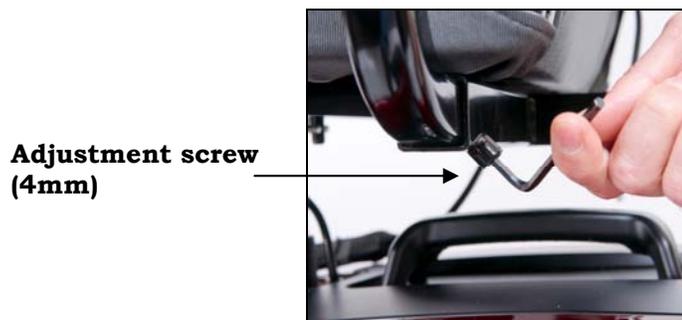


**Figure 18**

## VI. COMFORT SETTINGS - cont.

2. Adjust the arms to the desired width making sure not to exceed 28 inches total outside width at the armrests.
3. Tighten the arm width adjustment screw to secure the arm. See figure 18 on page 20.
4. Repeat steps 1-3 to adjust the opposite arm.

### Arm Rest Angle Adjustment

1. Lift the armrest.
2. Loosen the stop nut with a 10mm wrench. See figures 19-21.
3. Use a 5mm Allen wrench to turn the armrest angle adjustment screw. Turn the screw outward to adjust the angle downward, turn it inward to adjust the angle upward to the desired angle.

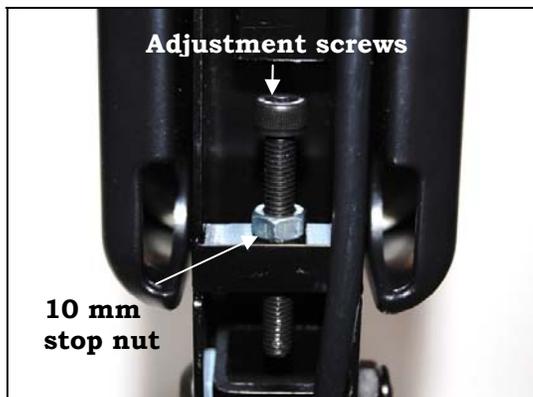

**Figure 19**



**Figure 20**



**Figure 21**


4. Tighten the stop nut with a 10mm wrench to lock the armrest angle adjustment screw.
5. Repeat steps 1-4 for the opposite arm.

### Footrest Angle Adjustment

1. Lift the footrest plate to access the adjustment bolt. See figure 22.




**Footrest Plate**

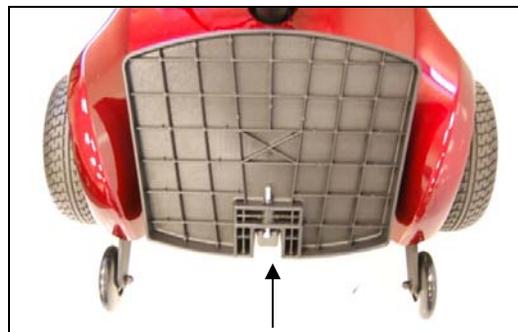


**Adjustment bolt**

**Figure 22**


## VI. COMFORT SETTINGS - cont.

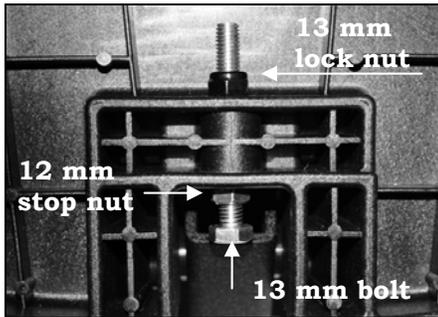

**Figure 23**

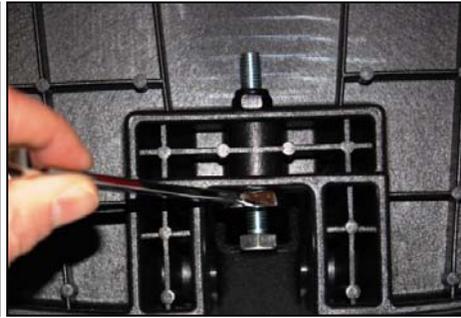

**Figure 24**

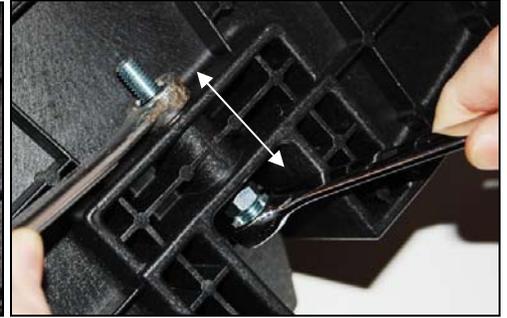

**Figure 25**

2. Loosen the stop nut with a 12mm wrench. See figures 23 and 24.
3. Use two (2) 13mm wrenches to turn the adjustment bolt. Turn the bolt inward to adjust the angle downward, turn it outward to adjust the angle upward to the desired angle. See figure 25.
4. Tighten the stop nut with a 12mm wrench to lock the footrest angle adjustment bolt.

### Joystick Bracket Length Adjustment

1. Loosen the joystick adjustment screw.



**Figure 26**

2. Loosen the joystick cable retaining straps.
3. Slide the joystick forward or backward to the desired position.
4. Tighten the joystick adjustment screw.
5. Reposition the joystick cable and secure with the retaining straps.

## VI. COMFORT SETTINGS- cont.

---

### **Joystick Position** (Refer to figure 26 on page 22)

1. Disconnect the cable connecting the joystick and the controller located under the seat.
2. Loosen the joystick adjustment screw.
3. Loosen the joystick cable retaining straps.
4. Slide the joystick mount forward and remove the joystick.
5. Position the joystick on either the left or right arm of the chair.
6. Adjust the length.
7. Tighten the joystick adjustment screw.
8. Reposition the joystick cable, reconnect the cable, and secure with the retaining straps.

**NOTICE** If you do not feel capable of safely making these adjustments, please contact your local Golden representative.

## VII. OPERATION

---

Your Alante DX/LT™ is simple to operate. However, for your safety and the safety of others, Golden Technologies, Inc. recommends that you carefully read and understand the following operating instructions. We also recommend that you practice operating your Alante DX/LT™ in an area free of any obstacles. Once you have gained confidence in your ability to control your power chair, you will more easily be able to operate it in normal daily conditions.

**⚠ CAUTION** Before turning on the power of your Alante DX/LT™, take note of your environment and set your speed control accordingly. (See “Speed Control Buttons” Figure 9 on page 15) For indoor driving, we recommend that you select the lowest speed setting. For outdoor driving, we recommend that you select a speed setting at which you feel comfortable, safe, and in control of your power chair. Familiarize yourself with the features of your Alante DX/LT™ described below and follow the instructions to safely operate your power chair.

### **DRIVING: The Joystick On/Off Switch**

Push the on/off button to turn on the power to your Alante DX/LT™. See Figure 9 on page 15. The 10 LEDs will flash once and a number of LEDs will remain depending on the state of the battery charge.

◆ The LED (Light Emitting Diode) array, that functions as the battery charge gauge, will light up. See “Battery Charging” on pages 32-33.

Pressing the on/off button again will turn off the power to your *Alante DX/LT™*.

### **The Speed Control Buttons**

These buttons provide you with a way to control the maximum speed of your Alante DX/LT.

◆ Push the “Slow” button repeatedly to set your chair’s speed to the slowest setting (recommended for indoor operation). Slowest speed is indicated by one (1) lit LED section on the speed indicator scale.

◆ Push the “Fast” button repeatedly to set your chair’s speed to its highest setting. Highest speed is indicated by five (5) lit LED sections on the speed indicator scale.

**NOTE:** For your safety, the controller automatically sets the reverse speed, acceleration, and deceleration in proportion to the speed control setting.

## VII. OPERATION

---

### The Joystick

The joystick (see Figure 9 on page 15) controls the speed (up to the maximum limit set by the speed control buttons) and direction of your power chair.

**NOTE:** When you are not pushing on the joystick, or when you release the joystick, the joystick will automatically return to the neutral position, the chair will decelerate, as the electromagnetic brakes are applied, and come to a smooth stop.

Pushing the joystick away from the neutral (center) position will move your *Alante DX/LT™* in the direction that the joystick is pushed.

◆ The farther forward or backward you push the joystick, the faster your power chair will go.

**To operate your power chair, gently push the joystick in the direction in which you want to travel.**

◆ Gentle operation of the joystick will provide you with smoother changes in speed and direction.

◆ Sharp or jerky operation of the joystick will result in quick and drastic changes in direction and speed.

### The Joystick Display

The joystick display (see Figure 9 on page 15) is a multifunctional visual display. This display provides three types of information.

1. On/Off status
2. Battery charge level
3. Fault diagnostics

#### 1. On/Off Status

When you turn on the power to your *Alante DX/LT™*, the LED array will light up (see Figure 9 on page 15).

◆ If the LED array is not lit, the controller and the power chair are not in operating mode.

## VII. OPERATION – cont.

---

### 2. Battery Charge Level

The joystick LED array is composed of ten (10) LED's.

- ◆Three (3) red
- ◆Four (4) amber
- ◆Three (3) green

When all ten LEDs are lit continuously, there is a full charge on the batteries. As you use your power chair and the batteries discharge, LEDs in the array will begin to turn off in descending order. A single lit red LED indicates the lowest state of operable charge on the batteries. The batteries should be charged immediately.

**NOTE:** To ensure a dependable battery charge, we recommend that you charge the chair's batteries overnight. Doing this will prolong the life of the batteries and spare you loss of operational power while you are using your chair normally.

### 3. Control System Status Indication

The joystick LED array is also designed to help you diagnose any problems with the electrical components of your power chair. The LED array does this by flashing on and off in a coded sequence. The battery gauge and maximum speed/profile indicator show the status of the control system. A number of supposedly defective control systems returned to us are subsequently found to operate correctly. This indicates that many reported faults are due to wheelchair problems rather than the control system.

#### **Battery Gauge is Steady**

This indicates that all is well.

#### **Battery Gauge Flashes Slowly**

The control system is functioning correctly, but you should charge the battery as soon as possible.

#### **Battery Gauge Steps Up**

The wheelchair batteries are being charged. You will not be able to drive the wheelchair until the charger is disconnected and you have switched the control system off and on again.

#### **Battery Gauge Ripples**

The joystick has been displaced (OONAPU) while the control system is switched on. Release the joystick to clear the fault.

Note that joystick OONAPU (**O**ut **O**f **N**eutral **A**t **P**ower **U**p) is not a fault. Simply by removing your hand from the joystick and allowing it to return to the neutral position, the fault will immediately clear. If the condition persists after removing your hand, the joystick may be damaged. Consult a Golden Technologies representative.

## VII. OPERATION – cont.

---

### **Battery Gauge Flashes Rapidly (even with the joystick released)**


The control system safety circuits have operated and the control system has been prevented from moving the wheelchair. This indicates a system trip, i.e. the VR2 has detected a problem somewhere in the wheelchair's electrical system.

Please follow this procedure:

- Switch off the control system.
- Make sure that all connectors on the wheelchair and the control system are mated securely.
- Check the condition of the battery.
- If you can't find the problem, try using the self-help guide given in section 1.6.
- Switch on the control system again and try to drive the wheelchair. If the safety circuits operate again, switch off and do not try to use the wheelchair.
- Contact your Golden Technologies representative for service.

### **Self-Help Guide**

If a system trip occurs, you can find out what has happened by counting the number of LEDs on the battery gauge that are flashing.

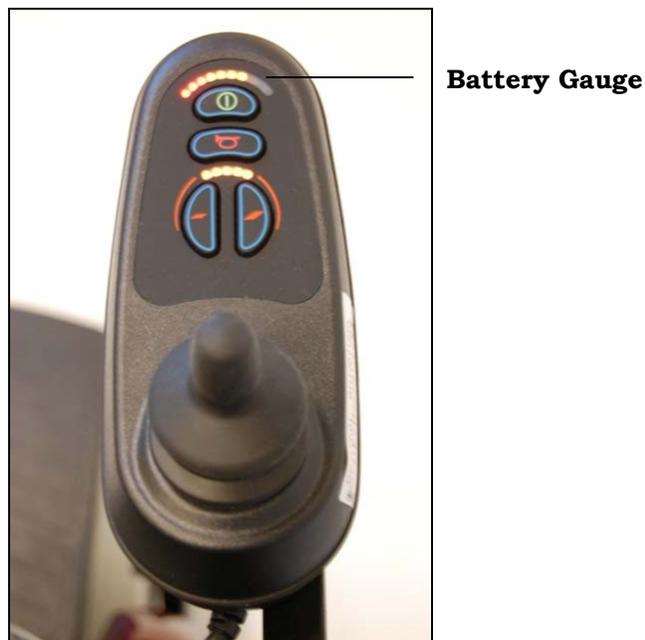

**Figure 27**

## VII. OPERATION

---

### DIAGNOSTICS/TROUBLESHOOTING

Below is a list of trouble-shooting actions. Try to use this list before you contact your Golden Technologies representative. Go to the number on the list which matches the number of flashing LEDs and follow the instructions. If the problem persists after you made the checks described, contact your Golden Technologies representative for further assistance.

- 1 LED** The battery needs charging or there is a bad connection to the battery. Check the connections to the battery. If the connections are good, try charging the battery.
- 2 LEDs** The left hand motor has a bad connection. Check the connections to the left hand motor.
- 3 LEDs** The left hand motor has a short circuit to a battery connection. Contact your Golden Technologies representative.
- 4 LEDs** The right hand motor has a bad connection. Check the connections to the right hand module.
- 5 LEDs** The right hand motor has a short circuit to a battery connection. Contact your Golden Technologies representative.
- 6 LEDs** The wheelchair is being prevented from driving by an external signal. The exact cause will depend on the type of wheelchair you have, one possibility is the battery charger is connected.
- 7 LEDs** A joystick fault is indicated. Make sure that the joystick is in the center position before switching on the control system.
- 8 LEDs** A control system fault is indicated. Make sure that all connections are secure.
- 9 LEDs** The parking brakes have a bad connection. Check the parking brake and motor connections. Make sure the control system connections are secure.
- 10 LEDs** An excessive voltage has been applied to the control system. This is usually caused by a poor battery connection. Check the battery connections.

## VII. OPERATION – cont.

---

### **Slow or Sluggish Movement**

If the wheelchair does not travel at full speed or does not respond quickly enough, and the battery condition is good, check the maximum speed setting. If adjusting the speed setting does not remedy the problem, then there may be a non-hazardous fault. Contact your Golden Technologies representative.

### **Maximum Speed/Profile Indicator is Steady**

The display will vary slightly depending on whether the control system is programmed to operate with drive profiles.

### **Maximum Speed Indication**

The number of LEDs illuminated shows the maximum speed setting. For example, if the setting is speed level 4, then the four left hand LEDs will be illuminated.

### **Profile Indication**

The LED illuminated shows the selected drive profile. For example, if drive profile 4 is selected, then the fourth LED from the left will be illuminated.

### **Maximum Speed/Profile Indicator Ripples Up and Down**

This indicated the control system is locked.

### **Maximum Speed/Profile Indicator Flashes**

This indicates the speed of the wheelchair is being limited for safety reasons. The exact reason will depend on the type of wheelchair; however, the most common cause is that the seat is in the elevated position.

### **The VR-2 modules are not user serviceable. Do not attempt to repair VR-2 modules.**

Note that joystick OONAPU (**O**ut **O**f **N**eutral **A**t **P**ower **U**p) is not a fault. Simply by removing your hand from the joystick and allowing it to return to the neutral position, the fault will immediately clear. If the condition persists after removing your hand, the joystick may be damaged. Consult a Golden Technologies representative.

## VII. OPERATION – cont.


---

### **FREEWHEEL MODE**

- ◆ To disengage the brakes and put your power chair in freewheel mode, push the free wheel levers back towards the rear of the power chair. See Figure 28.
- ◆ To re-engage the brakes and take your chair out of freewheel mode, pull the levers forward towards the front of the power chair. See Figure 29.



**Figure 28**

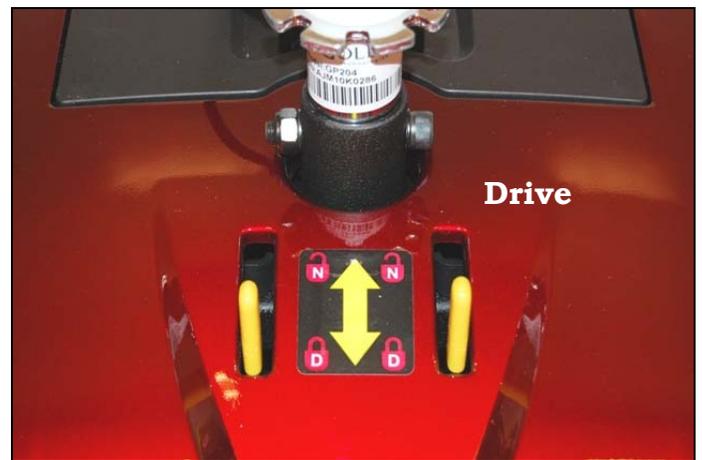

**Figure 29**



**WARNING** Never put your power chair in freewheel mode when it is on a slope or incline of any type.



**WARNING** Never put your power chair in freewheel mode while you are operating your power chair.

## VII. OPERATION – cont.

---

### **THERMAL ROLLBACK**

Your Alante DX/LT™ is equipped with a safety system. A microprocessor monitors the operating temperatures of the controller. In the event of excessive heat occurring in the controller, the controller will decrease the speed of your chair. This is done to reduce the load on the electrical system and allow the components to dissipate heat. The controller will automatically set the chair's speed back to full normal when the operating temperature returns to normal levels.

### **THE MAIN CIRCUIT BREAKER**

The main circuit breaker is another safety feature incorporated into your Alante DX/LT™. This device monitors the amount of current being drawn from the batteries when the chair is in use. When the motors are heavily strained and too high a current draw is being placed on the batteries, the main circuit breaker will trip and bring your chair to a stop. The main circuit breaker is located under the battery box handle.

### **RESET BUTTON**

If the main circuit breaker trips, please wait for approximately 1 minute and then push the reset button to reset the main circuit breaker. See Figure 30.



**Figure 30**

**NOTE:** Usually, the thermal rollback feature is more sensitive than the main circuit breaker. We recommend that you turn off the power to the chair and wait for five minutes when the chair suddenly loses speed or power. Doing so will allow the overheated electrical components to cool to their normal operating temperatures.

## VIII. BATTERY CHARGING



### WARNING

You must use only the charger that is supplied with your Alante DX/LT™. The use of any other charger on this power chair will void the warranty. Using unauthorized chargers may also result in severe damage to the batteries and/or damage to the chair. Using the wrong charger may also be a hazard.

### OPERATIONAL RANGE

Depending on the use, the terrain, and the driving conditions, the batteries will provide up to 8 miles of operation on your Alante DX™, or 6.5 miles on your Alante LT™.



**WARNING!** Corrosive chemicals contained inside battery.  
Explosive battery conditions exist.



**WARNING!** Charger surface can become HOT.  
Electrical hazard!

### BATTERIES AND CHARGING

Battery maintenance is the most important part of maintaining your power chair. Keeping the batteries fully charged helps to extend battery life. Use the following guidelines to help keep your batteries in optimum condition.

**IMPORTANT!** New batteries **MUST** be fully charged prior to the initial use of your power chair.

**Charge new batteries for 12 hours even if the battery gauge already shows a full charge. This is to condition your new batteries for maximum performance.**

- For daily use, keep batteries fully charged. We recommend that you plug in the off-board charger after each use and charge 6-8 hours.

**“For best results please charge your batteries overnight after every use.”**

- If you are not going to use the power chair for more than a week, **fully charge** the batteries and then disconnect them from the power chair. See figure 2 on page 12.

### NOTICE

#### **Charging Guidelines Checklist to Maximize Battery Life**

- ✓ Use only the automatic off-board charger supplied for all routine charging.
- ✓ Never use an automotive or wet type charger.
- ✓ Avoid deep discharges and never drain the batteries completely.
- ✓ Do not leave batteries in a low state of charge for extended periods. Charge a discharged battery as soon as possible.
- ✓ Fully recharge batteries regularly.
- ✓ Always store batteries fully charged.
- ✓ Check stored batteries once a month and recharge as necessary.

## VIII. BATTERY CHARGING

### CHARGING THE BATTERIES

Your Alante DX/LT's charging system is designed for your safety and for your convenience. Follow the steps below to recharge the batteries.

1. Position your Alante DX/LT™ close to a standard wall electrical outlet.
2. Turn off the power on the joystick.
3. Insert the matching charger plug into the joystick's charging socket that is located at the front of the joystick. See Figures 31 and 32.
4. Insert the plug at the other end of the charger power cord into a standard electrical wall outlet. (Power to the charger indicated by a red LED).
5. Disconnect the charger power cord from the wall outlet and from the joystick charging socket when the batteries are fully charged.



**Figure 31**



**Figure 32**

Alternatively, you may charge the battery pack directly.

1. Remove the battery pack from the power chair.
2. Locate the charger port at the rear side of the battery pack and swing the cover out of the way.
3. Plug the charger into the battery pack socket.



**Figure 33**

4. Insert the plug at the other end of the charger power cord into a standard electrical wall outlet.
5. Disconnect the charger power cord from the wall outlet and from the battery pack charging socket when the batteries are fully charged.

**NOTE:** The batteries should be fully charged in eight hours. A full charge is indicated when the green light on the battery charger side panel turns on and all 10 joystick LEDs are lit when joystick is turned on.

## IX. CARE AND MAINTENANCE

---

Your Alante DX/LT™ is designed to require minimal maintenance.

We recommend that you periodically check the following:

**Tire Tread:** Regularly visually inspect the tire tread. If the remaining tread is less than 1/32 of an inch, have your local Golden representative replace the worn tires.

**Joystick and Controller:** Protect the joystick and controller from adverse weather conditions. Moisture will damage the controller and void your power chair's warranty.

**Cleaning:** Use only a water-dampened soft cloth to clean the ABS shroud. The shroud has a protective coat that is very easy to maintain.



**WARNING** Do not use free-flowing water to clean your Alante DX/LT™. Water and extreme temperatures are the main elements that can adversely affect your power chair and its performance.

### **Water, Rain, Sleet, and Snow**

Water, in any form, will cause electronic malfunction or corrosion of the electrical components, connections, and the chair frame.

### **Temperature**

- ◆ At extremely low temperatures, the batteries of your power chair may freeze, preventing your *Alante DX/LT™* from operating.
- ◆ At extremely high temperatures, your power chair may operate at slower speeds due to the controller's thermal rollback feature that is designed to prevent damage to the motors and to the other electrical components of the chair.

## **X. RIDING YOUR Alante DX/LT**

---

### **Control through tight spots**

As you use your Alante DX/LT™ to increase your mobility, you will undoubtedly encounter some obstacles that will require practice to negotiate smoothly and safely. Below are some common obstacles that you may meet during the daily use of your power chair. Listed with those obstacles are some driving tips that should help you conquer those obstacles. Learn and follow those tips, and with surprising ease you will soon be in control of your power chair as you maneuver it through doors, up and down ramps, up and over curbs, through grass and gravel, and up and down inclines.

#### **Doors**

- Approach any unfamiliar door slowly.
- Notice if the door has a door knob or a push bar.
- Determine if the door opens towards you or away from you.
- Do not try to use your own strength to open the door. Learn to use the power of your power chair to do the majority of the work for you.

#### **If the door opens away from you:**

1. Use one hand to turn the door knob or to operate the push bar.
2. Use your other hand to control the power chair by gently operating the joystick to move your power chair slowly forward.
3. Use your arm to push the door gently open.
4. Drive through the doorway.
5. If it is a self-closing door, it will close behind you.
6. If it is not a self-closing door, stop your power chair when it is clear of the door and use your hand to push the door closed.

#### **If the door opens towards you:**

1. Use one hand to turn the door knob or to pull the handle.
2. Keep your grip on the door knob or on the handle.
3. Use your other hand to control the power chair by gently operating the joystick to move your power chair slowly backward.
4. Allow the power of your Alante DX/LT to pull the door completely open.
5. When the door is completely open, stop your power chair.
6. Drive through the doorway while keeping your hand on the door to prevent it from hitting or blocking your power chair.
7. If it is a self-closing door, it will close behind you.
8. If it is not a self-closing door, pull it closed behind you.

## X. RIDING YOUR Alante DX/LT

---

### Ramps

Because of the American Disabilities Act (ADA), many buildings are fitted with ramps that provide access for power chairs and for other mobility vehicles.



**MANDATORY!**

**Please read and thoroughly understand “Safety Rules” and “Driving On An Incline” sections of this manual.**



**Alante DX GP204 – (Red Body Color)**

## XI. TECHNICAL SPECIFICATIONS

Specification	Alante DX	Alante LT
Model Number	GP-204	GP-215
Medicare Code	K0823	K0816
Weight capacity	300 lbs.	300 lbs.
Drive Wheels	Front	Front
Maximum speed	3.5 mph	3.5 mph
Operating Range <sup>1</sup>	8 miles	6.5 miles
Ground Clearance to mid frame	2 5/8 in.	2 5/8 in.
Turning Radius	24.5 in.	24.5 in.
Type Batteries	2-22 AH	2-18 AH
Colors	Red	Red
Freewheel Mode	Yes	Yes
Electronic Speed Control	Yes	Yes
Electro-Mechanical Brakes	Yes	Yes
Charger	Off Board	Off Board
Controller	PG VR-2 50 Amp Remote	PG VR-2 50 Amp Remote
Length	40.0 in.	40.0 in.
Width	24.0 in.	24.0 in.
Height (ground to top of back of seat)	34.5" - 36.5"	34.5" - 36.5"
Height (ground to top of back of headrest)	41.5" - 43.5 "	41.5" - 43.5 "
Ground to top of Seat	20.5" - 22.5"	20.5" - 22.5"
Number of Seat Height Adjustments	3	3
Size of Increments	1.0 in.	1.0 in.
Front axle to Rear axle	N/A	N/A
<b>Weight of Unit: (assembled)</b>	133 lbs.	130 lbs.
Front Half	N/A	N/A
Rear Half	N/A	N/A
Base	67 lbs.	67 lbs.
Seat with Arms	36 lbs.	36 lbs.
Batteries	30 lbs./pack	27 lbs./pack

## XI. TECHNICAL SPECIFICATIONS

Specifications	Alante DX	Alante LT
Model Number	GP-204	GP-215
<b>Tires:</b>	Flat Free	Flat Free
Front	9.5 in.	9.5 in.
Rear	N/A	N/A
Casters	6 in.	6 in.
Front Anti-Tip Wheels	4 in.	4 in.
<b>Standard Seat:</b>	Captain's Seat	Captain's Seat
Slide Seat	N/A	N/A
Back Height (no headrest)	18"	18"
Back Height (with headrest)	24.5" - 26.5"	24.5" - 26.5"
Width x Depth	18" x 16"	18" x 16"
Color	Gray Vinyl	Gray Vinyl
<b>Optional Seat:</b>	Stadium Style	Stadium Style
Back Height (no headrest)	16 in.	16 in.
Back Height (with headrest)	N/A	N/A
Width x Depth	20" x 18"	20" x 18"
Color	Charcoal Vinyl	Charcoal Vinyl
<b>Footrest:</b>	Yes	Yes
Height adjustable	No	No
Angle adjustable	Yes	Yes
<b>Warranty:</b>		
Frame	Five Years	Five Years
Drive Train	13 Month Warranty	13 Month Warranty
Electronics <sup>2</sup>	13 Month Warranty	13 Month Warranty

**\* Notes:**

1. Battery range will vary due to rider weight, drive surface, and terrain.
2. Electronics warranty excludes batteries.

Literature is current at the time of printing. Golden Technologies reserves the right to make changes to the product or literature at any time.

## XII. WARRANTY

### Consumer Limited Warranty Power Wheelchairs

The following warranty is granted only to the INITIAL Consumer who has purchased our product and commences on the Date of Purchase by the Consumer from an Authorized Golden Technologies' Provider. The Consumer must have a warranty registration card filed with Golden Technologies to receive service. This warranty supersedes all previous warranties for all power chair models.

The warranty covers the following power wheelchair models unless otherwise noted:

- ◆ Alanté Jr GP200
- ◆ Alanté GP201
- ◆ Alanté DX GP204
- ◆ Alanté LT GP215
- ◆ Compass GP600
- ◆ Compass GP601
- ◆ Compass Sport GP605
- ◆ Compass TRO GP615
- ◆ Compass GP620

#### Limited Lifetime Warranty:

In the event of defective materials or workmanship, Golden Technologies will repair or replace at our option any of the following **structural frame components** found to be defective by an authorized Golden Technologies representative:

- ◆ Steel Frame\*
- ◆ Frame Welds\*
- ◆ Seat Post\*

\*The GP615TRO, GP620, GP204, and the GP215 are warranted for FIVE YEARS.

#### Thirteen-Month Limited Warranty:

For the period of thirteen months from the date of purchase, in the event of defective materials or workmanship, Golden Technologies will repair or replace at our option any of the following **structural frame components** found to be defective by an authorized Golden Technologies representative:

- ◆ Caster Beam
- ◆ Anti-Tip Forks
- ◆ Caster Forks
- ◆ Armrests
- ◆ Footrest

For the period of thirteen months from the date of purchase, in the event of defective materials or workmanship, Golden Technologies will repair or replace at our option any of the following **drive train components** found to be defective by an authorized Golden Technologies representative:

- ◆ Motor/Gearbox Assembly
- ◆ Brake Assembly (electrical function only)

**Note: An increase in operating noise of the motor/gearbox DOES NOT constitute a defect. With normal wear and tear, operating noise is expected to increase.**

For the period of thirteen months from the date of purchase, in the event of defective materials or workmanship, Golden Technologies will repair or replace at our option any of the following **electronic assemblies** found to be defective by an authorized Golden Technologies representative:

- ◆ Electronic Controller
- ◆ Battery Charger
- ◆ Wire Harness(es)  
(excludes boot covers)

**NOTICE** While charging batteries, it is normal for the battery charger to heat up. Heat coming from the battery charger DOES NOT constitute a defect.

## XII. WARRANTY

---

### Consumer Limited Warranty *Power Wheelchair (continued)*

For the period of thirteen months from the date of purchase, in the event of defective materials or workmanship, Golden Technologies will repair or replace at our option any of the following **parts** found to be defective by an authorized Golden Technologies representative:

- |   |   |   |
|---|---|---|
| <ul style="list-style-type: none"> <li>◆ Bearings</li> <li>◆ Bushings</li> <li>◆ Seat swivel mechanism</li> </ul> | <ul style="list-style-type: none"> <li>◆ Rubber Components (excludes tires and all wear parts)</li> </ul> | <ul style="list-style-type: none"> <li>◆ Plastic Components (excludes body &amp; all wear parts)</li> </ul> |
|---|---|---|

Items not mentioned or listed are covered at the discretion of Golden Technologies. Any accessories, standard or optional, supplied by Golden Technologies, are covered for a period of one year from the date of purchase with the particular unit.

#### **Warranty Exclusions:**

Golden Technologies does not provide warranty on any of the following items which may require replacement due to the normal wear and tear of day to day usage:

- |  |   |  |
|--|---|--|
| <ul style="list-style-type: none"> <li>◆ Tires and Tubes</li> <li>◆ ABS Plastic Shrouds</li> <li>◆ Armrest Pads</li> </ul> | <ul style="list-style-type: none"> <li>◆ Motor Brushes</li> <li>◆ Bulbs/Fuses</li> <li>◆ Battery Cases</li> </ul> | <ul style="list-style-type: none"> <li>◆ Brake Pads</li> <li>◆ Upholstery</li> </ul> |
|--|---|--|

This warranty also excludes the following:

- ◆ Batteries (Please consult battery manufacturer for any implied warranty).
- ◆ Loss or theft of components.
- ◆ Damage caused by:
  - Battery fluid spillage or leakage.
  - Abuse, misuse, accident or negligence.
  - Improper operation, maintenance or storage.
  - Commercial use or use other than normal.
  - Repairs and/or modifications made to any part without the specific consent of Golden Technologies.
  - Exceeding the specified weight capacity of the unit.
  - Accessories other than those supplied or approved by Golden Technologies.
  - Failure to adhere to the product instructions.
  - Acts of Nature, such as lightning strikes, earthquakes, etc....
  - Circumstances beyond the control of Golden Technologies.
- ◆ **ANY PARTS ALTERED OR REPAIRED BY UNAUTHORIZED PERSON.**

#### **Warranty Service:**

Warranty Service must be performed by an authorized Golden Technologies representative. Golden Technologies reserves the right to replace warranted part(s) with refurbished or new part(s) at our discretion. All labor charges, service calls, transportation costs or any other charge(s) associated with the installation of any warranted part(s) are the responsibility of the consumer. Warranty is for the replacement of the parts only and does not include freight for the replacement parts. Consumers are not to return any item(s) to Golden Technologies without prior written authorization. Any damages incurred while warranted part(s) are in transport are the sole responsibility of the consumer.

**There is no other express warranty.**

Implied warranties, including those of merchantability and fitness for a particular purpose are excluded. Liabilities for consequential damages are excluded.

This warranty gives you specific rights and you may also have other rights which may vary from state to state.

# WARRANTY/REGISTRATION FORM

---

---

## Golden Technologies Product Registration Form

Please fill out this product registration form or you can also register your product online at [www.goldentech.com](http://www.goldentech.com). Failure to register your product may result in significant delays should service be required.

### OWNER INFORMATION:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

### PRODUCT INFORMATION:

Serial Number: \_\_\_\_\_

Purchased From: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

### MAIL COMPLETED FORM TO:

Golden Technologies  
401 Bridge St.  
Old Forge, PA 18518

Fold Here First



\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Place  
Stamp  
Here

Golden Technologies  
401 Bridge St.  
Old Forge, PA 18518



Fold Here Second



# *AlantéDX*

# *AlantéLT*



**Models GP204/GP215**



401 Bridge Street  
Old Forge, PA 18518  
Tel: 800-624-6374  
Fax: 800-628-5166  
[www.goldentech.com](http://www.goldentech.com)